# ARIES®-MLX, ARIES®-SLX LED and Relay Output Driver Modules Models ATM-L and ATM-R



Effective: May 2020

K-76-236

### **FEATURES**

- Model ATM-L supports 32 programmable, supervised LED outputs, 6 system-level LED outputs and 5 system-level input circuits
- Model ATM-L supports 32 programmable LED outputs, 6 system LED outputs and 5 system inputs
- Model ATM-R activates up to 32 programmable relays
- Up to 16 ATM-L, ATM-R or combination of both per control unit
- Can be mixed with up to 15 RDCMs per control unit
- Can be installed up to 4000 feet (1219 meters) from control unit
- Supports applications with legacy Kidde Fire Systems control units
- UL Listed and FM Approved

#### **DESCRIPTION**

The Model ATM-L Annunciator (LED) Driver Module (P/N 76-200004-032) provides ARIES®-MLX, ARIES®-SLX or legacy control units (ARIES® NET*Link*, ARIES®) with up to 32 programmable, supervised LED outputs for graphical or tabular annunciators, along with 6 system-level LED outputs and 5 system-level input circuits for functional switches.

The system-level LEDs correspond to the following general conditions:

- Module Power
- Alarm
- Pre-Alarm
- Alarm Silence
- Supervisory
- Trouble

The functional switches provide for the following operator intervention:

- System Reset
- Event Acknowledgment
- Alarm Silence
- Fire Drill
- Lamp Test

The Model ATM-R Relay Driver Module, P/N 76-200005-032, can activate up to 32 programmable, supervised relays.

These modules communicate with the control unit via an external RS-485 communications circuit, with the most-remote module capable of being located up to 4,000 feet from the control unit. Up to 16 remote ATM-L, ATM-R or combination of both can be mixed with up to 15 RDCMs on the control unit's RS-485 circuit.

Both modules can be powered from the control unit's power supply, or from an external, regulated, and power-limited power supply Listed for use with fire-protective-signaling equipment.




Model ATM-L Annunciator Driver Module

## INSTALLATION

The ATM-L Module is intended for mounting inside the enclosure of a UL-864 Listed remote annunciator. Use the mounting hardware provided with the module. Wire routing and installation methods are to be in accordance with the annunciator installation instructions.

The ATM-R is intended for mounting inside the enclosure of a UL-864 Listed accessories cabinet. Use the mounting hardware provided with the module (see Figure 1).

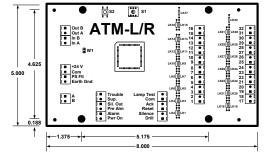

Note:

Maintain a minumum one-half (1/2) inch clearance around ATM-L and ATM-R Modules when installed in mounting enclosure.

Figure 1. Module Mounting Dimensions

### **SPECIFICATIONS**

Operating Voltage 16.0 to 28.8 Vdc

(non-resettable)

Standby Current 0.045 A

Output Activation Common Positive individ-

ual-output negative pull

downs

**ATM-L Outputs** 

LED 0.015 A maximum

Audible Appliance 0.015 A maximum

ATM-R Outputs 0.080 A maximum

**Total Alarm Current** Depends upon output load.

Must be calculated for each

application.

Supervised Power-Limited Wire Sizes

RS-485 14 - 18 AWG (Twisted,

Communications Unshielded)

24 Vdc Power 14 - 18 AWG (as required)

LEDs 18 AWG

Functional Switches 18 AWG

Audible Appliance 18 AWG

Power Supply Supervised 14 - 18 AWG

**Initiating Circuit** 

Relays 18 AWG

### **ORDERING INFORMATION**

Part Number	Description	Weight
76-200004-032	ATM-L Annunciator Driver Module, 32 independently programmable LED drivers	2.0 lb.
76-200005-032	ATM-R Relay Driver Module, 32 independently program- mable relay drivers	2.0 lb.

#### EXPORT INFORMATION (USA)

Jurisdiction: EAR
Classification: EAR99
This document contains technical data subject to the EAR.

ARIES is a registered trademark of Kidde-Fenwal, Inc., or its parents, subsidiaries or affiliates.

This literature is provided for informational purposes only. KIDDE-FENWAL, INC. believes this data to be accurate, but it is published and presented without any guarantee or warranty whatsoever. KIDDE-FENWAL, INC. assumes no responsibility for the product's suitability for a particular application. The fire suppression system design, installation, maintenance, service and troubleshooting must be performed by trained, authorized Kidde Fire Systems distributors for the product to work correctly. If you need more information on this product, or if you have a particular problem or question, contact: KIDDE-FENWAL, INC., Ashland, MA 01721 USA, Telephone: (508) 881-2000.

